


# 10D

## Module Dimensions and Pinouts

The following mechanical drawing is useful if designing circuit boards to mount the 10D modules. Many sockets are available which accept the mounting pins. As an example, [TBD](#) provides a socket with part number [TBD](#).

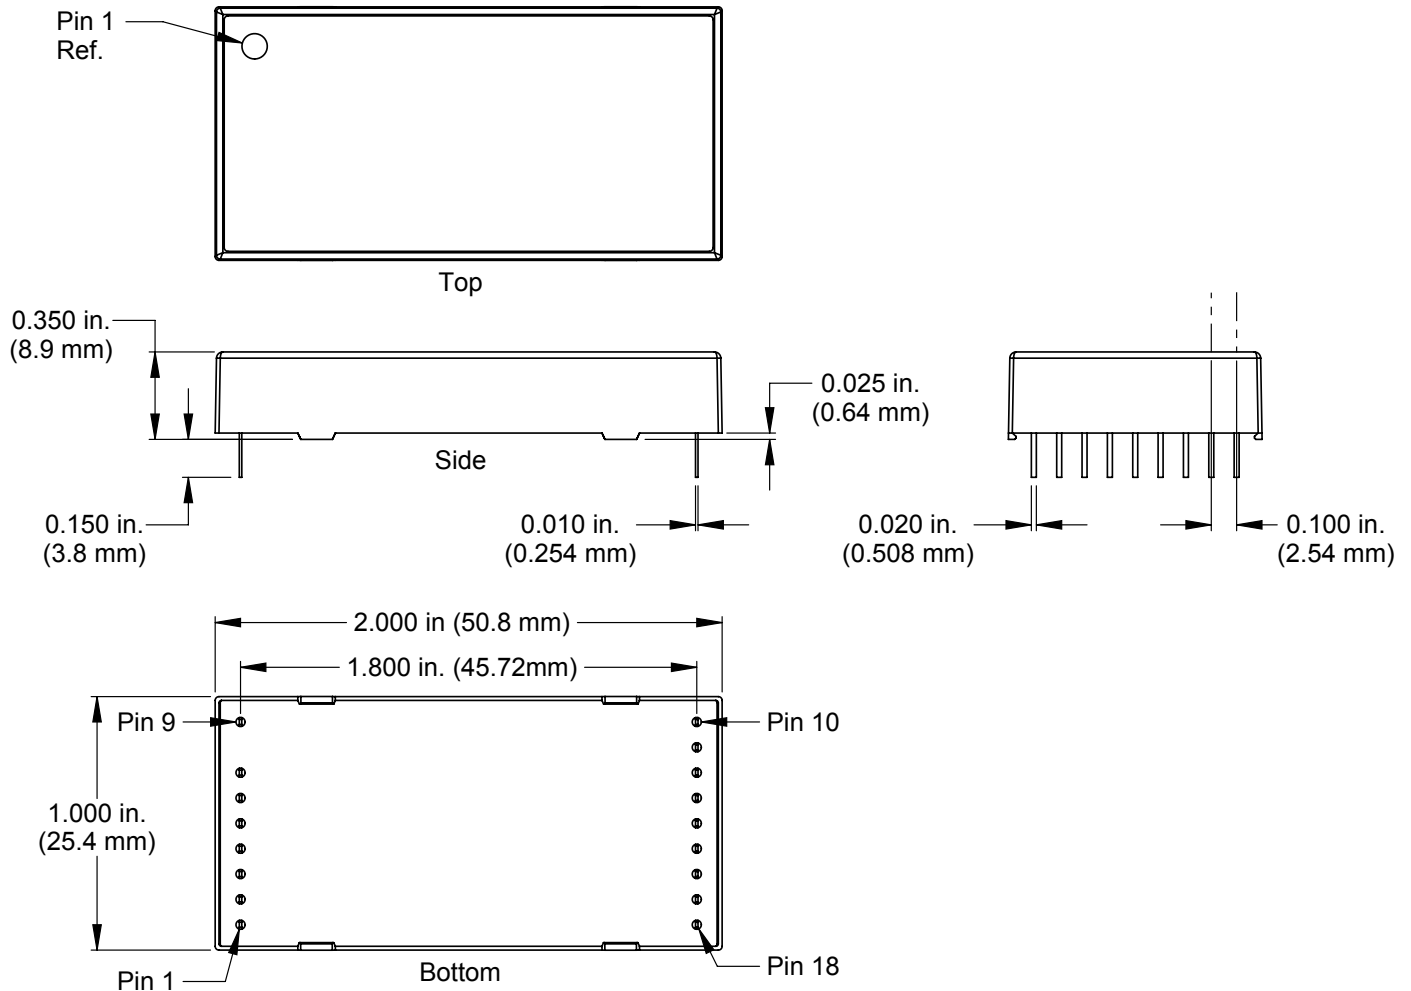

### 10D Pinouts